


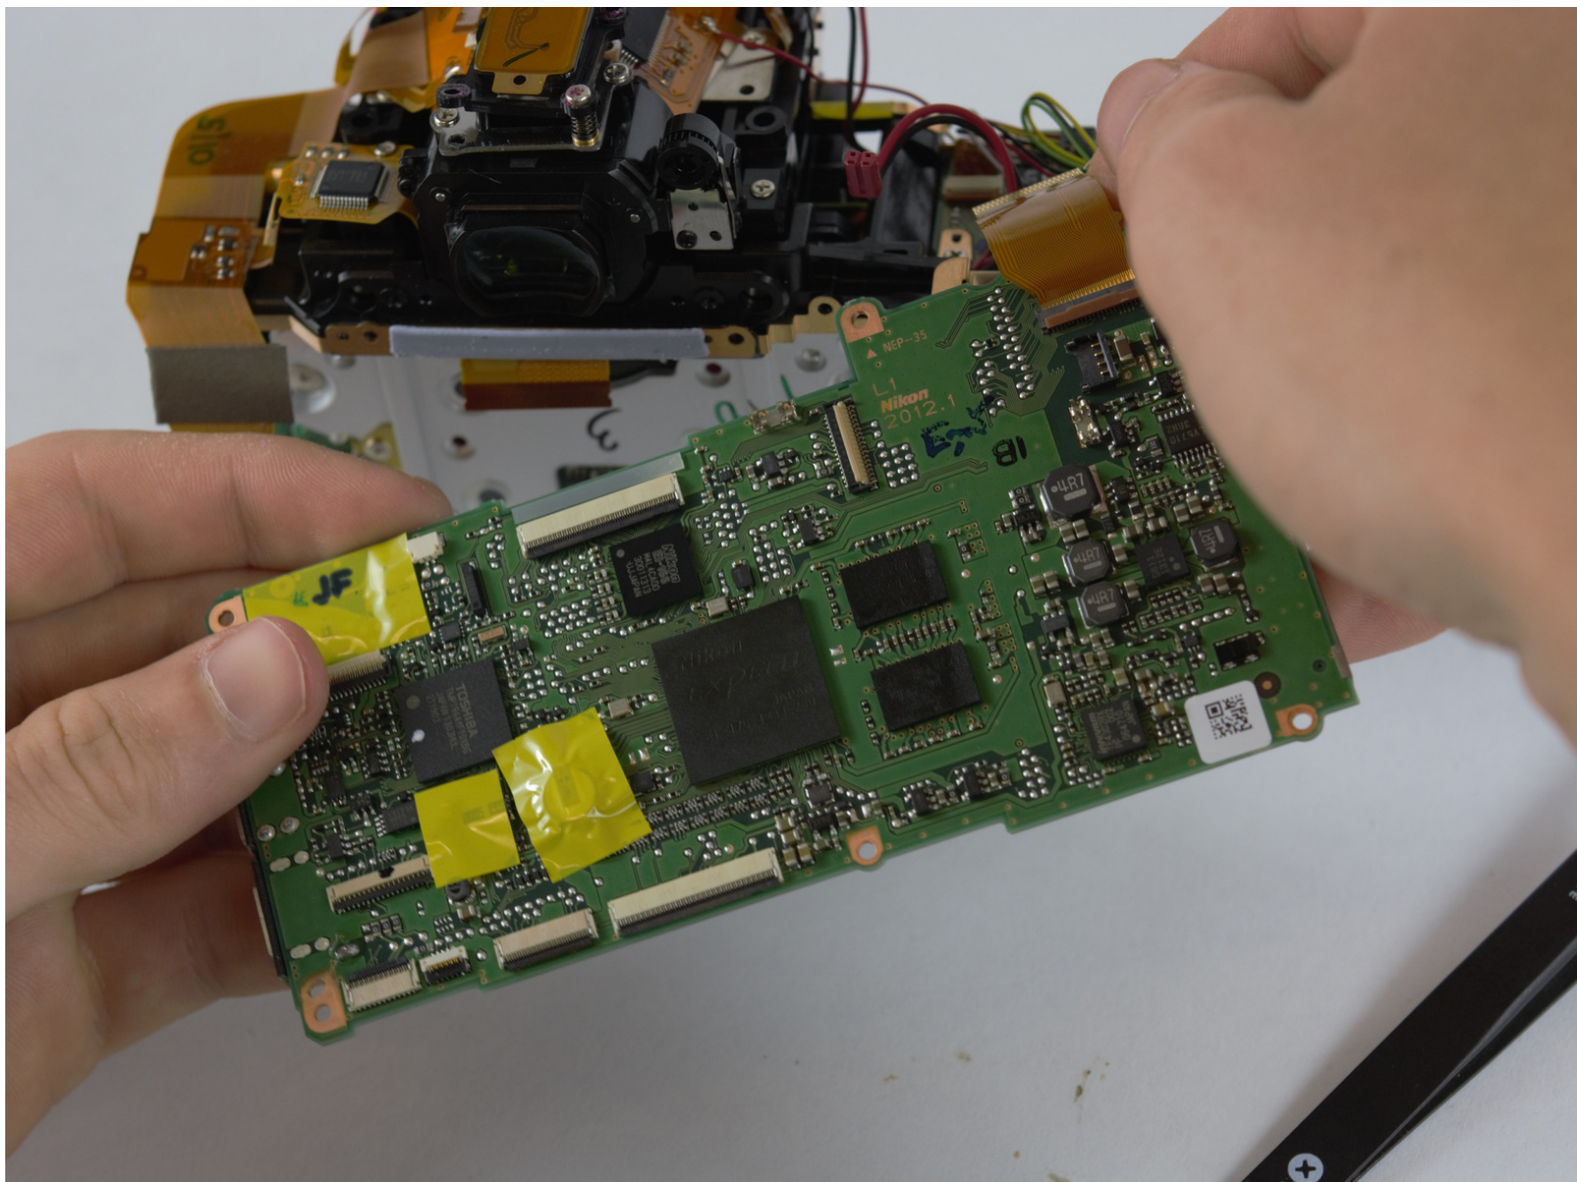

Nikon D610 Motherboard Replacement

This guide will help you to replace the motherboard on your Nikon D610.

Written By: Daniel Eagan



INTRODUCTION

This guide will demonstrate the steps required to replace a problematic motherboard on your Nikon D610.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Desoldering Braid](#) (1)
 - [Soldering Station](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery



- First, power off the device.

Step 2



- Set the camera so that it is sitting on its side.
- Open the battery compartment door by sliding the release button towards the lens.
- This will cause the door to "pop" open slightly

Step 3



- Now lift open the battery compartment door.
- Push the yellow tab lock towards the center to release the battery.
- ⓘ This will cause the battery to jump up as there is a spring at the bottom.
- Pull straight out, slowly on the battery.
- ⚠ Make sure you pay attention to which way the battery goes .

Step 4 — Outer Case



- After removal of the battery. Pull the battery compartment door away from the lens.
- There are eleven Philips head screws that hold the bottom cover on, including a few inside the battery compartment.
- Remove all the screws and the bottom face should pop off easily.

Step 5



- Then next step is removing the seven Philips #00 screws that hold the rear face plate on.
- There are screws hidden in three separate spots.
- One is under the rubber doors on the left side of the camera. the next one at the eye hole.
- The final one involves taking off the small dial that is about half an inch to the right of the eye hole.
- Removing this dial involves putting a spungder tool behind it and applying a gradual amount of pressure.

Step 6




- The rear face plate will include the LCD display it separates from the body of the camera with a small tug.
- ⚠ Do not pull too hard otherwise you risk breaking the ribbon wire that connects the controls and the screen.
- Once there is enough space it will be possible to gently pull the ribbon cable out of their ports.

Step 7





- The next piece to come off is the front plate and the red grip.
 - The front plate is held on by 2 Philips #00 screws on the front and two more beneath the flash bulb.
 - Remove the two Phillips #00 screws holding on the grip and it slides off easily.
- i** After removing the screws the face plate comes off by pulling it straight off to avoid damage.

Step 8

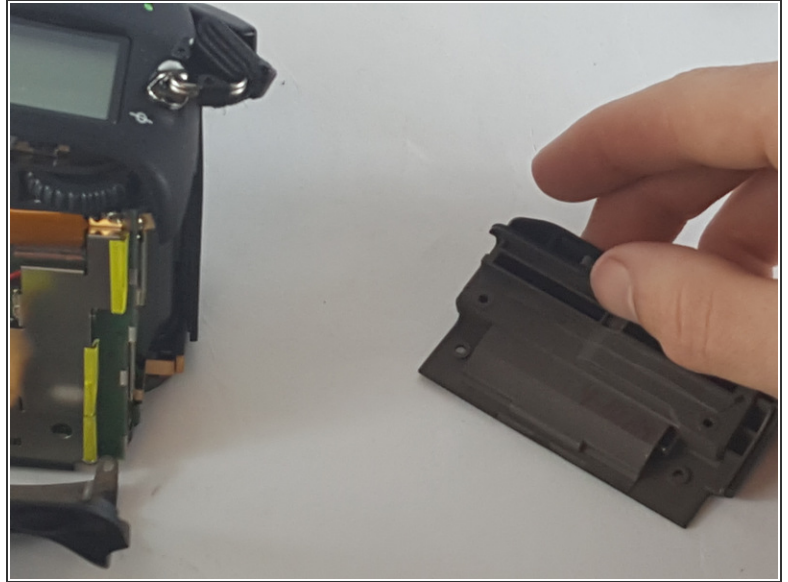



- It is now possible to remove the last three Philips #00 screws that are hidden under the memory card slot door.
 - The screws come out and the cover comes straight off.
 - The last cover plate is the top. The top is held on by two screws located just beneath the rim of the cover.
- ⚠ The top should be pulled off very slowly. There are several electronic components that connect between the body and the top.
- ⓘ There are three wires that need to be disconnected.

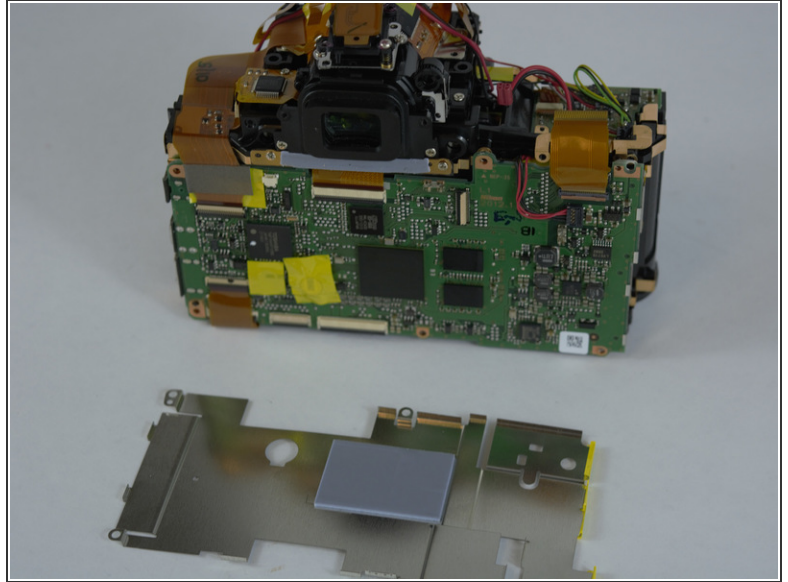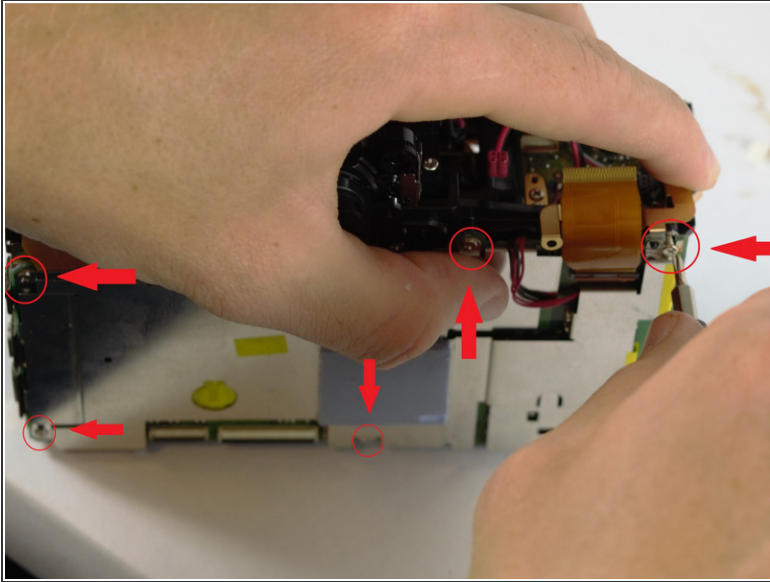

Step 9 — Motherboard



- The rear side of the camera is where the motherboard is located. It is visible after you have taken off the rear face plate.
- Remove the shield that protects it from static first.
- This shield has six Philips #00 screws that are positioned around the edge of the shield.
- After removal of the screws the shield will come free from the motherboard.

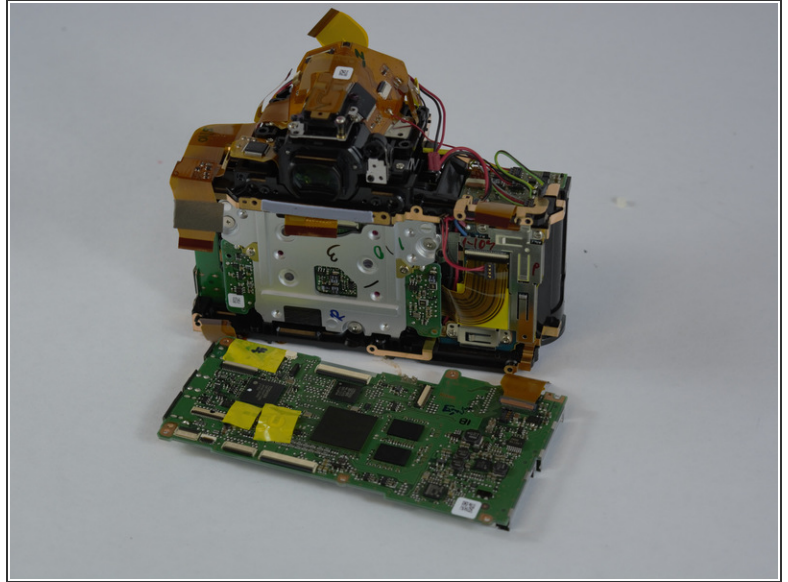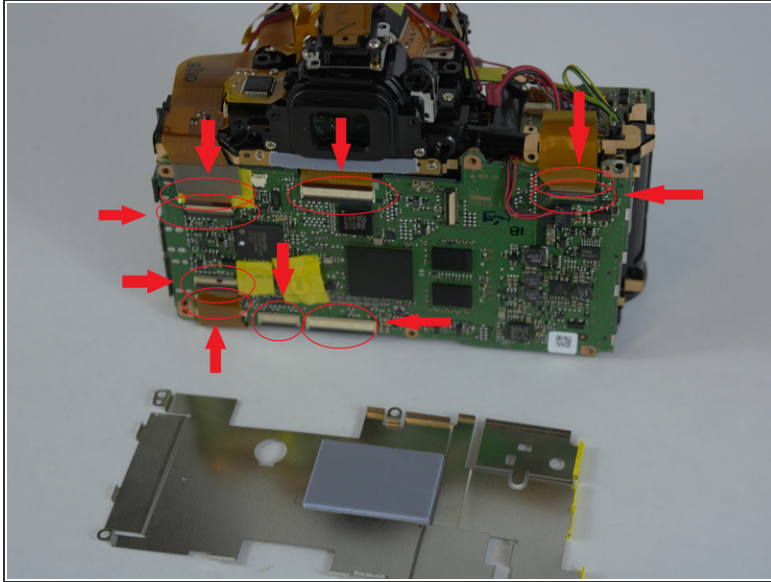Step 10



-  The six screws that were removed in the previous step also hold the motherboard in place.
- There are a few ribbon cables that connect to the motherboard to the rest of the camera with some of them hiding under other ribbon cables.
-  Be very careful when removing the ribbon wires. If they break it can cause problems with needing more repairs.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 09:07:52 PM.